


Small RTO

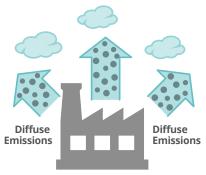



Small air flow = low operating cost, diffuse emissions

Large RTO

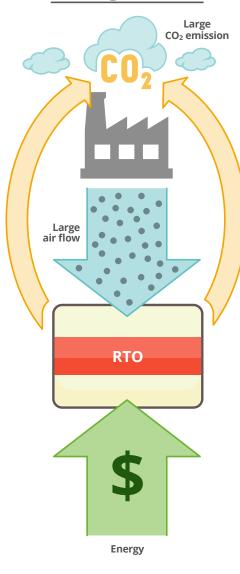

Large air flow = high operating cost, large CO₂ emission

ZEOTECH Zeolite Industrial Air Purification

Zeotech Rotor System

